



# A50

## A50 UltraClear Sound Shaping Expandable Cordless Telephone



### Installation Guide & User Manual

*Congratulations... You have just purchased the  
Most Remarkable Amplified Cordless Expandable Telephone System  
In The World!*

**Thank you for selecting the A50 UltraClear Sound Shaping Expandable Cordless Telephone from BellSouth. This manual will help you install your telephone and learn its basic operation.**

The BellSouth A50 has been designed specifically to meet your needs, blending an array of valuable features with simplicity and style. **The BellSouth A50 is truly the Most Remarkable Amplified Phone In The World!**

This Installation Guide and User Manual provides you with information to set-up and start using your BellSouth A50. Please read these instructions thoroughly before using your telephone.

**Keep this manual for future reference.**

**Please save your sales receipt as proof of purchase in the event you need warranty service.**

Please visit our web site at [www.bellsouthspecialneeds.com](http://www.bellsouthspecialneeds.com) to:

- **Register your product**  
It's easy! Click on the Product Registration link, Complete the form and click "submit". It's that simple!
- **Download additional manuals and troubleshooting tips.**

**(See back cover for details on warranty service.)**

**If you need assistance, please contact our Customer Solutions Hotline at: 800-586-9828.**

# Table Of Contents

<b>CONDITIONS FOR USE</b>	Page 5
<b>FEATURES &amp; FUNCTIONS</b>	
Base Unit Top & Bottom Views	Page 6
Handset Front View	Pages 6-7
Handset Left side, Right side & Back side Views	Page 8
LCD Screen information & description	Pages 8-9
<b>GETTING STARTED</b>	
Components List	Page 9
Telephone Base Installation	
Installing modular phone line & AC adapter	Pages 9-10
Telephone Handset Installation	
Installing batteries	Page 11
Handset battery charging	Page 11
Low batteries	Page 11
Battery life	Page 12
Belt clip installation	Page 12
<b>SET UP FEATURES</b>	
Handset	
Handset registration	Page 12
Area code setting	Page 13
LCD contrast setting	Page 13
Ringer setting	Page 13
Time setting	Pages 13-14
Auto amplify mode /volume reset override	Pages 14-15
Handset vibration setting	Page 15
<b>TELEPHONE OPERATION</b>	
Background Information	
Hearing aid compatibility	Page 15
900 MHz	Page 15
Operating range	Pages 15-16
Channel operation	Page 16
Amplification Operation	
Volume control	Page 16
Tone control	Page 16

# Table Of Contents

Basic Operation	
Answering a call	Page 17
Making a call	Page 17
Using the Pre-dialing feature	Page 17
Using the Last number redial feature	Page 17
Using the Flash feature	Page 17
Using the Pause feature for dialing	Page 18
Using Line Transfer feature	Page 18
Using the Page / Handset location feature	Page 18
Using the Headset feature	Pages 18-19
Phone Book Operation	
Dial from the phone book	Page 19
VIP and REJECT Functions	Page 19
Add new number/name	Page 19
Save number from CALLER ID	Page 20
Review number/name	Page 20
Modify number/name	Page 20
Delete number(s)	
A specific call record	Page 20
All call records	Page 21
CALLER ID Operation	
Reviewing the CALLER ID display	Page 21
New calls / message waiting indicator	Page 21
Remove call record(s) from CALLER ID	
All call records	Page 21
A specific call record	Page 22
CALLER ID on Call Waiting Operations	Page 22
<b>EXPANDABLE HANDSET(S)</b>	Page 22
<b>SECURITY</b>	Page 22
<b>TECHNICAL INFORMATION</b>	Page 23
<b>MAINTENANCE AND CARE</b>	Page 24
<b>SPECIFICATIONS</b>	Pages 24-25
<b>TROUBLESHOOTING GUIDE</b>	Pages 25-26
<b>FCC REGULATORY COMPLIANCE</b>	Pages 27-28
<b>WARRANTY AND SERVICE</b>	Page 29

# Conditions for Use

## Important Safety Instructions

Read and understand the Installation Guide & User Manual. When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to person, including the following:

**WARNING:** Follow all warnings and instructions marked on the telephone.

**WARNING:** The BellSouth A50 is capable of amplifying sounds to a loud volume. It is important to instruct all potential users of its proper operation. It is advised to adjust the volume control to the minimum level (Low) when not in use and alert other users that hearing damage can potentially result from misuse.

**WARNING:** To avoid the possibility of electrical shock, do not use this product near water (For example, near a bathtub, wash basin, kitchen sink or laundry tub, in a wet basement or near a swimming pool) while in the bathtub or shower or when you are wet. If the phone becomes submerged in water, do not attempt to retrieve it until after you have unplugged the line cord from the modular wall jack. Do not plug the phone back in until it has dried completely.

**WARNING:** Avoid using the telephone during electrical storms. There may be a remote risk of electric shock from lightning. If the electrical storm is present in your immediate area, possibility of electrical shock exists.

**WARNING:** Do not use the phone if you suspect a gas leak in the area. The phone's electrical contacts could create a spark, which could ignite any heavy concentration of leaking gas.

**WARNING:** Unplug this telephone from wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners on the telephone. Use a damp cloth for cleaning.

**WARNING:** No telephone should ever be placed near an open radiator or heating register.


**WARNING:** Occasionally a power surge can occur on electrical lines without warning. With any electrical device that you plug into an outlet, it is suggested you use a surge protector. A surge protector will prevent power surges from damaging your telephone. Surge protectors are simple devices available at your local hardware store.

**WARNING:** Do not overload wall outlet or extension cords, as this can increase the risk of fire or electrical shock.

**WARNING:** Never push any objects through the slots in the phone. They can touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.

## PLEASE SAVE THESE INSTRUCTION

# Features & Functions

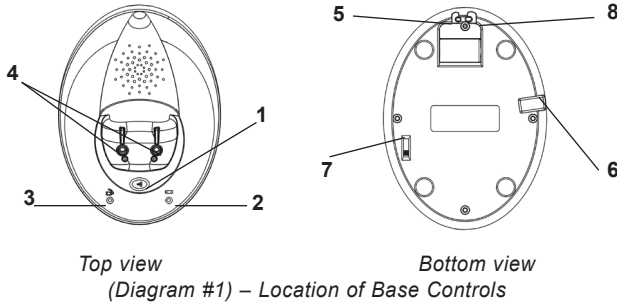




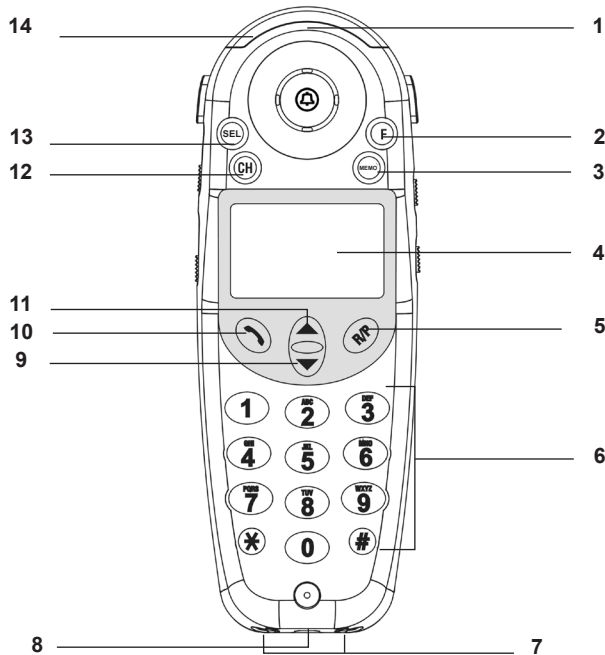
1. **Page icon button (PAGE):** Press to page the handset. The handset will ring for about 25 seconds then end the paging automatically.
2. **Charger indicator LED:** Lights up when handset is placed on the base for charging. (RED)
3. **In use indicator LED:** Lights up when the handset is in the TALK mode. (RED)
4. **Charging terminals / contacts:** To charge the batteries inside the handset. For best performance, clean periodically with a damp cloth only.
5. **Telephone line connection jack:** To connect to the telephone line jack.
6. **Shaker plug:** To connect to an optional vibrating shaker.
7. **Ringer volume switch:** Set the base ringer HI/MED/LO/OFF.
8. **Adapter plug-in connection:** To connect the AC adapter to the base.

## Front View of Handset Controls


1. **Visual Ringer indicator:** A bright flashing light that flashes with each ring of the telephone.
2. **F button (FLASH/DELETE):** Press to answer an incoming call if you have Call Waiting. The "F" button is also used to cancel an action/entry or clear a stored CALLER ID call.
3. **MEMO button (PROGRAM):** Press to store numbers in memory or to call a number you've previously stored.
4. **LCD display:** The screen shows the activity and programming of your handset. The CALLER ID feature is optional.
5. **R/P button (REDIAL/PAUSE):** Both the last number redial and the pause feature. Press to redial the last number you've dialed (See page #18 for operating instructions). To insert a pause while dialing (See page #18 for operating instructions).

# Features & Functions


6. **Lighted keypad:** The keypad stays lit up for 15 seconds after removing the handset from the base. To reactivate the feature while in standby, press the  or the "MEMO" button. To activate while the phone is in use, press any key.
7. **Charge pins:** Enables the circuit to be initiated.
8. **2.5mm headset jack:** To connect your hands-free headset.
9.  **Arrow DOWN button:** Use to highlight or scroll through the menu.
10.  **(TALK):** Press to answer an incoming call, to place a call or to end a call.



(Diagram #2) – Location Front view of Handset Controls

11.  **Arrow UP button:** Use to highlight or scroll through the menu.
12. **CH button (Channel/Registration):** Press to change the operating channel when you notice interference.
13. **SEL button (SELECT/CONFIRM):** Use to confirm action or a choice on the screen.
14. **AMPLIFY ON indicator:** Lights up (a single red light) when the AMPLIFY mode is turned ON.

# Features & Functions

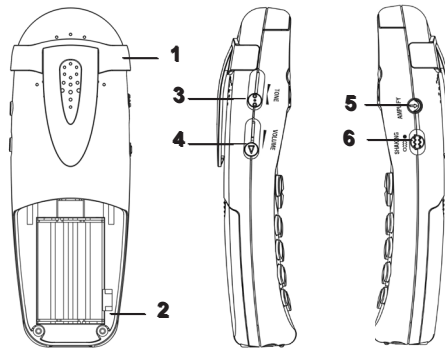

*Back View      Left View      Right View*  
(Diagram #3) – Location of Back & Sides of Handset Controls

1. **Belt clip:** Use to attach handset to the waist.
2. **Auto Amplify switch:** Use to AUTOMATICALLY return to your previous volume setting every time you use the handset without having to press the “**AMPLIFY**” button.
3. **Handset tone control:** Adjust the incoming voice tone level on your handset so you can clearly understand every word.
4. **Handset volume control:** Adjust the handset volume to your desired hearing level.
5. **Amplify button:** Use to turn ON/OFF the additional handset amplification.
6. **Shake mode switch:** Turns the handset shaker ON/OFF when the telephone rings.

## LCD Information & Description

Your BellSouth A50 has a screen with different icons to help you use the telephone.

00:47 01/01

HS-1

(Diagram #4) – Call ID Display – In standby mode

**BATTERY indicator:** When the batteries are low, the battery low icon will be displayed.

**END OF LIST message:** This message will display when reaching the top (end) of the phone book or CALLER ID list by using the ▲ or ▼ arrow buttons.



# Features & Functions

**ERROR message:** The CALLER ID display is unable to identify the caller's name and/or number. The LCD will show **ERROR**, this does not mean that there is a fault with your phone.

**IN STANDBY mode:** In this mode the LCD display will show the handset number, date and real time (*See diagram #4*).

**IN USE indicator:** In this mode the LCD display will show **TALK** and the call time.

**MESSAGE WAITING message:** If you have voice mail service from your telephone company and a recorded message is left, the "**MESSAGE**" will turn ON and flash. You can press "**F**" button twice to delete the icon. **NOTE:** You must subscribe to voice mail from your local telephone company.

**NEW call:** If there are new calls in memory, the **NEW** icon will turn ON and flash. After all the new calls have been reviewed, the icon will turn OFF.

**OUT OF AREA message:** This message will display when someone calls from an area where the telephone company is not offering the call identification services or is not yet providing name and number delivery to your area via the long distance network.

**PRIVATE message:** If the caller has exercised the option to prevent his number from being sent, **PRIVATE** will be shown on the screen.

**REPEAT (RPT) icon:** Will display if an incoming call has been received more than once. Only the information for the most recent call has been recorded in memory

## Getting Started

### Component List

Carefully remove your cordless telephone from its box. Check to be sure you have all items that come with your telephone. You should have a TELEPHONE BASE UNIT, TELEPHONE HANDSET, BELT CLIP, 6ft LONG MODULAR TELEPHONE LINE CORD, AC adapter, (3) AAA NiMH RECHARGEABLE BATTERIES AND OWNER'S MANUAL.

### Telephone Base Installation

Choose a location for the base near an electrical outlet and a telephone jack. This telephone


requires a modular phone jack (RJ11C) and a standard 120V AC wall outlet. Place this telephone on a stable surface. Serious damage and/or injury may result if the telephone falls.

**NOTE:** Install the base away from electronic equipment such as personal computers, television sets or microwave ovens. Avoid excessive heat, cold, dust or moisture.

### **Installing Modular Phone Line & AC adapter**

This section is a reference guide to the basic installation of your cordless telephone.

1. Plug one end of the supplied modular telephone line cord in the jack located on the bottom side of the telephone base (*See diagram #5*).
2. Plug the modular telephone line cord's other end into a modular phone jack in the wall.
3. Insert the supplied AC adapter's plug into the jack (12V DC 500mA) located on the bottom of the telephone base. Plug the adapter into a standard 120V AC electrical outlet. Make sure that the AC adapter is inserted completely into the base unit plug.
4. **NOTE:** Place the handset in the base after following the Battery Installation directions that follow.

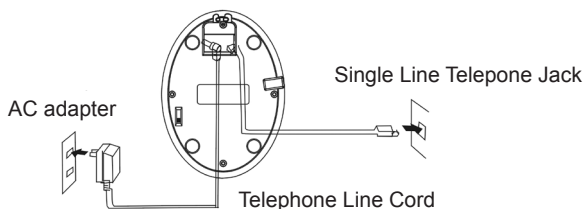

*(Diagram #5) – Connection of the telephone line and AC adapter*

**CAUTION:** Always connect the AC adapter to the phone before you plug it into the AC power outlet. To disconnect your phone, first disconnect the AC adapter from the wall outlet before you disconnect it from the phone base.


## **Telephone Handset Installation**

The BellSouth A50 uses (3) AAA NiMH rechargeable batteries that are included with your unit. It charges automatically whenever the handset is in the base.

**IMPORTANT! Only use AAA rechargeable batteries. DO NOT USE REGULAR ALKALINE OR CARBON BATTERIES!**

## Installing Batteries


Handset batteries **MUST** be connected before beginning initial charging!

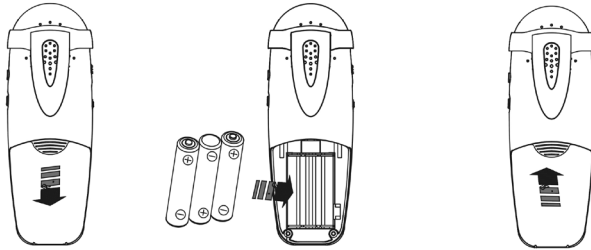


(Diagram #6) – Installing the batteries

1. Remove battery compartment cover by sliding it downwards.
2. Install new batteries. Be sure to observe battery polarity as imprinted on the base of the compartment (See diagram #6).
3. **NOTE:** Before replacing the battery compartment cover – you may want to select a setting for the AUTO AMPLIFY MODE
4. Replace the battery compartment cover by sliding upward until it clicks into place.

## Handset Battery Charging

1. Place the handset into the base. The charge indicator LED on the base (See diagram #1) will light RED.
2. **IMPORTANT:** The batteries in the handset must be fully charged for **24 hours** before using the telephone for the first time.
3. After the batteries are fully charged, check for dial tone by pressing the  button on the handset.

## Low Batteries

When the handset batteries get low during a call, there will be a warning tone (3 beeps) and the low battery icon will appear on the CALLER ID display. End your call by pressing the  button to return to standby mode, and then place on the base or charger to recharge. Make sure the contact points are touching and the charge indicator LED is lit RED.

The battery level can also be monitored via the battery charge icon. This icon appears while the phone is in standby mode and indicates the condition of the batteries.

When the handset batteries get low, when not in use and off the base, the low battery icon will appear on the CALLER ID display. Place on the base or charger to recharge. If not, after 4 hours the phone will be dead and you will need to recharge for 24 hours before using.


## **Battery Life**

Fully charged batteries provide an average talk time of about 4 hours, or standby time of about 8 days. Talk time & standby time may vary depending on operating conditions.

The life of the NiMH battery is more than one (1) year.

## **Belt Clip Installation**

You may choose to use the optional belt clip provided with your handset (*See diagram #7*).

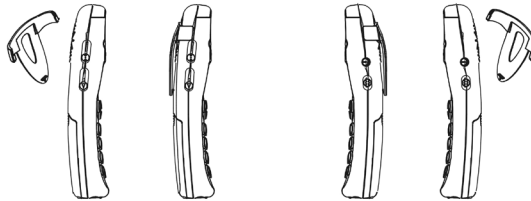

(Diagram #7) – Install and remove the belt clip

1. To attach, slide the belt clip down onto the grooves. Press the tabs on the belt clip into the slots to attach.
2. To remove, lift one side of the belt clip with your thumbnail and push back.

# **Set up Features**

## **A50 Handset**

You will need to wait **24 hours** after initial charging before setting up any features listed below.

## **Handset Registration**

1. Make sure the base unit is connected into the AC outlet and phone jack.
2. Press and hold the ● /PAGE button on the base unit. After 3 seconds, press the “CH” button on the handset, and the unit will give a confirmation beep, which means that the code has been set and the handset will show **HS-1** (Handset 1) on the LCD.
3. If you have more than one handset, press the “CH” button on the handset until you get a beep and the display reads **HS-2**. Continue the same procedure if you have a third handset. If not, release the ● /PAGE button from the base.

**NOTE:** The ● /PAGE button on the base unit should be kept pressed during the whole procedure.



## **Area Code Setting**

Your BellSouth A50 allows you to dial from your CALLER ID memory and your phonebook. When you use your phone for the first time or if you have moved to a different area code, you need to enter your area code into the phone. This assures that when dialing a call out of memory or your phonebook, the number is formatted properly. To set your area code:

1. Press the **"SEL"** button once, then the LCD display will show **PROGRAM** to indicate you entered the SETTING MODE.
2. Press the **1** key, then the LCD display will show **AREA CODE**.
3. Enter the area code number (up to 4 digits) by using the numeric keys on the handset (you can press the **"F"** button to delete the error digits).
4. Press the **"SEL"** button once more to confirm and exit.
5. A confirmation beep will sound.



## **LCD Display / Screen Contrast Adjustments**

You can adjust the contrast on the LCD screen to darken or lighten. There are four levels of contrast and the default is set at level 4. Your screen has a backlight that will automatically switch OFF after 15 seconds of inactivity.

1. Press the **"SEL"** button once, then the LCD display will show **PROGRAM** to indicate you entered the SETTING MODE.
2. Press the **2** key, then the current level **CONTA ST ADJ XIX=1,2,3,4** will show on the LCD display.
3. Press the  or  arrow buttons to get the desired level.
4. Press the **"SEL"** button once more to confirm and exit.

## **Ringer Setting**

The ringer setting must be activated for the handset to ring.

1. Press the **"SEL"** button once, then the LCD display will show **PROGRAM** to indicate you entered the SETTING MODE.
2. Press the **3** key, then the current mode **RINGER ON/OFF** will show on the LCD display.
3. Press the  or  arrow buttons to activate / deactivate the ringer function.
4. Press the **"SEL"** button once more to confirm and exit.
5. A confirmation beep will sound.

**NOTE:** If both the handset and base ringer's are set OFF, the visual ringer will flash to indicate there is an incoming call.

## **Time Setting**

If you have CALLER ID service, the date and hour will be automatically set when you receive your first call. If you currently do not have CALLER ID service through your phone company, please follow the directions below.

1. Press the “**SEL**” button once then the LCD display will show **PROGRAM** to indicate you entered the SETTING MODE.
2. Press the **4** key, then the **SET TIME** will show on the LCD display and the digit for MONTH will flash (the sequence is MONTH-DAY-HOUR-MINUTE).
3. Press the ▲ or ▼ arrow button to get the desired number.
4. Press the “**SEL**” button to confirm.
5. To set the DAY - Press the ▲ or ▼ arrow button to get the desired number and press the “**SEL**” button to confirm.
6. To set the HOUR - Press the ▲ or ▼ arrow button to select the correct number (12H am/pm), followed by the “**SEL**” button to confirm.
7. To set the MINUTES - Press the ▲ or ▼ arrow button to enter the MINUTES. After the last setting (MINUTES) is completed press the “**SEL**” button to confirm.
8. A confirmation beep will sound.

### **Auto Amplify Modes/Volume Reset Override**

You can increase the volume and adjust the receiving tone according to your own hearing requirements.

**NOTE:** When the **AMPLIFY** mode is turned ON automatically or manually, the amplify indicator light will remain lit (*See page #7 for location*).

#### **I. Auto Amplify ON**

To set handset amplifier so that it will AUTOMATICALLY return to your previous volume setting every time you use the handset without having to press the “**AMPLIFY**” button.

1. Simply turn the “**AUTO AMPLIFY**” switch in the battery compartment to the ON (up) position using the tip of a pencil. When the “**AUTO AMPLIFY**” switch is in the ON position, you do not need to press the “**AMPLIFY**” button on the side of the handset. On any call, you can temporarily turn OFF and turn back ON the **AUTO AMPLIFY** feature by pressing the “**AMPLIFY**” button.

#### **II. Auto Amplify OFF**

To set your handset in the standard mode so that it will reset to normal sound levels when you hang-up. This allows people who do not require the level of amplification offered on the phone to use it.

1. Turn the “**AUTO AMPLIFY**” switch in the battery compartment to the **OFF** (down) position. The amplify feature is automatically deactivated each time you use the phone. You will manually need to activate the function temporarily by pressing the “**AMPLIFY**” button.

**Caution:** When the “**AUTO AMPLIFY**” switch is set to **ON**, the handset volume will be set to loud. To protect people who do not experience a hearing loss, we suggest setting the switch to **OFF**. You may turn the extra amplification feature back **ON** by pressing the “**AMPLIFY**” button.

### **Handset Vibration Setting**

The vibration call alert feature notifies you of incoming calls by making the handset vibrate. When an incoming call is received, you can turn the vibrate/shake mode to **ON** (up) position, and the handset will vibrate/shake. To turn **OFF** this function, just turn the switch to **OFF** (down) position (*See page #8 for switch location*).

## **A50 Telephone Operation**

### **Background Information**

#### **Hearing Aid Compatibility**

Your BellSouth A50 can be used with hearing aids equipped with a telecoil (T-coil). Adjust your hearing aid “T-switch” to the “T” position. Make sure to hold the handset close to your hearing aid.



#### **900 MHz**

The 900 MHz frequency technology allows cordless telephones to:


1. Provide better range of operation
2. Provide better obstacle penetration
3. Provide better power efficiency
4. Provide better battery life
5. Provide better overall sound quality
6. Be less prone to interference

#### **Operating Range**

This cordless telephone operates within the maximum power allowed by the Federal Communication Commission (FCC). Even so, this handset & base can communicate over only a certain distance – which can vary with the location of the base and handset, the weather, and the construction of your home or office.

**If you receive a call while you are out of range**, the handset might not ring – or if it does ring, the call might not connect when you press  button. Move closer to the base then press  button to answer the call.

**If you move out of range during a phone conversation**, you might hear noise or inter-

ference. To improve reception, move closer to the base. Once the handset is too far away from the base, an out of range warning tone will be sounded indicating the user should move closer to the base. If not, after about 20 seconds, the handset will automatically disconnect and your phone will be left off the hook. To hang-up properly, when walking back into range the handset will make a noise, press the  to return to standby mode.

### **Channel Operation**

During the conversation, the phone will scan for the clearest of 40 channels automatically. If you still hear noise or static, press the “**CH**” button to find a clear channel.

**NOTE:** It takes about 2 seconds for the BellSouth A50 to scan a channel.

## **Amplification Operation**

### **Volume Control**

The BellSouth A50 has an “**AMPLIFY**” button located on the right side of the handset. The “**AMPLIFY**” button controls the loudness and tone of the handset. Without pressing the “**AMPLIFY**” button, you are able to amplify the handset level up to 30 dB. Once the “**AMPLIFY**” button is pressed, an extra level amplification is added providing 30 to 50 dB of gain and tone control.

When the “**AUTO AMPLIFY**” switch is in the ON position, you do not need to press the “**AMPLIFY**” button. Your amplification setting will remain as set (*See page #14 for setup instructions*).

**Note:** When the **AMPLIFY** mode is turned ON either manually or automatically, you will see a red light remain lit on the top of the handset when in use. This light will help you know when the additional amplification is being used.

Adjust the volume by moving the slide control. Slide the Volume control **DOWN** to lower the level and slide the Volume control **UP** to increase the level.

### **Tone Control**

In addition to amplification, your BellSouth A50 offers the ability to adjust the Sound Frequency Range you are amplifying. **Sound frequency range** is also called tone control. Tone control allows you to adjust the sound to fit your specific hearing needs. Slide the **TONE** button DOWN, to boost the lower frequency range and slide the **TONE** button UP to boost the high frequency range. This allows individuals with both high frequency and low frequency hearing loss to use the BellSouth A50. PLEASE NOTE: the Tone Control will only operate once the AMPLIFY mode is turned ON.




# Basic A50 Operation



## Answering A Call

1. If the handset is off of the base, press the  button to receive the call.

-Or-

1. If the handset is in the base, lift the handset to receive the call.
2. Adjust your Volume and Tone settings if needed (*See page #16 for information on adjusting Volume & Tone controls*).
3. On completion of the call press the  button or return to base or charger.


## Making A Call

1. Press the  button and wait for a dial tone.
2. Dial the telephone number.
3. Adjust your Volume and Tone setting if needed.
4. To end the call, just press the  button or return to base or charger.

**NOTE:** During a call, press the “F” button to get a new dial tone for another call or switch to call waiting (*See page below for additional information*).


## Using The Pre-Dialing Mode

By using the keypad to pre-enter the desired telephone number will insure the correct telephone number will be dialed.

1. In standby mode, dial your desired number. The numbers will appear on the CALLER ID screen. You can press “F” button to delete the incorrect digits.
2. If the phone number is correct, press  button and it will be dialed automatically. Then you start your conversation.

## Using The Last Number Redial

The last number dialed is stored in the redial memory until another number is dialed. To use the redial feature quickly:

1. Press the  button and listen for the dial tone.
2. Press the “R/P” button. The phone will redial up to **24** digits automatically.

## Using the Flash Feature

The “F” button is used to disconnect a call and re-establish dial tone or to switch over to another caller if you use calling services such as Call Waiting or Three Way Calling. Please contact your local telephone company for information on these services.

1. During a call press the “F” button to access the flash feature.



### Using The Pause Feature For Dialing

The “**R/P**” button is used to insert a temporary pause during a dialing sequence. Programming in a pause will cause the phone to wait two (2) seconds before dialing additional numbers. This feature may be used when it is necessary to dial an access code (9, for example) and wait for a second dial tone before you can dial an outside number. Press the “**R/P**” button at the required point during the memory storage process to program a pause.

When dialing an international number for example (i.e. 011-555-55-555-5555), some telephone company systems will not register the entire number entry without a pause between the prefix numbers. You may have to dial 011- “**R/P**” button, dial 555- “**R/P**” button. This allows adequate timing for the phone number to register with the telephone company’s system and complete the call.




### Using Line Transfer Feature

If extra handsets are set to the base unit:

1. During a phone conversation, press the “**SEL**” button and the handset number you wish to transfer to. The line will be on HOLD and will make an audio sound on the other handset.
2. On the other handset you can press  to answer the call automatically after receiving the transfer ring.
3. Press the  button to return the connection back if the other handset user does not want to take the call during the transfer ring.
4. If the two handsets do not respond within 60 seconds, the line will disconnect automatically.

### Using The Page / Handset Location Feature

Send a page signal from the base to the handset or to locate the handset.

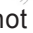1. Press the  **/PAGE** button located on the base of the telephone to page the handset.
2. Press the  **/PAGE** button once more to cancel the paging feature.
3. If you do not press the  **/PAGE** button again, the handset will ring for about 30 seconds then end the paging automatically.

### Using The Headset Feature

You can use this telephone hands-free when you connect a 2.5mm headset (purchased separately). To connect, plug the headset into the **HEADSET JACK** at the bottom of the handset.

While in the Headset Mode, the volume of the headset is controlled by the telephone and the handset’s earpiece and microphone are disconnected. Follow the procedures discussed in ANSWERING A CALL and PLACING A CALL (See pages #17 & 18) when you receive and place a call.

**NOTE:** When you plug the headset into the **HEADSET JACK**, it automatically mutes the microphone and speaker of the cordless handset. Unplug the headset to return the handset to normal use.



**Ordering a Headset or Neckloop:** Headsets are available at most retail outlets that sell telephone equipment or contact BellSouth Special Needs Equipment Center at 800-586-9828 or visit [www.bellsouthspecialneeds.com](http://www.bellsouthspecialneeds.com). We recommend using the BellSouth Headset or BellSouth CLA7 Amplified Powered Neckloop.

## Phone Book Operation


### Storing Name And Numbers To Phone Book

You can store up to 60 names and numbers in the memory.

#### Dialing a number from phone book

1. In standby mode, press the **"MEMO"** button, and then the LCD shows the total number of records.
2. Press the  or  arrow button to go to the record you want to dial. Please see REVIEWING NAMES & NUMBERS IN THE PHONE BOOK (on page #20) for other modes of selection.
3. When the screen displays the number you want to dial, press the **#** symbol. The phone automatically dials the number.

#### VIP and REJECT Functions

If you store a name ending with **"★"** key, it will be a VIP (Very Important Person) number. If you store a name ending with  key, it will be a REJECT number.

When a VIP number is received, the handset ringer will operate (ring) whether or not it is turned ON or OFF.

When a REJECT number is received, the handset ringer will not operate (ring) whether or not the feature is turned ON or OFF.

#### Adding numbers and names to phone book

1. Begin with the phone in the standby mode, add the new number you want to store using the keypad. Enter the phone number up to 23 digits.
2. Press the **"MEMO"** button and then the LCD will show NAME.
3. Enter the name up to 11 characters using the **"2 to 9"** on keypad.  
Press the 2 key once for A, twice for B and 3X for C.  
Press the number **"1"** key to insert a space between name.  
Press the **"F"** button to erase any mistake.
4. Press the **"MEMO"** button to confirm and a confirmation beep will sound.

-Or-

### **Save numbers and names from the CALLER ID to phone book**

1. Begin with the phone in the standby mode, press the ▲ or ▼ arrow button repeatedly to find the CALLER ID number you want to add.
2. If the number has the caller's name, press the "MEMO" button to store. If the number does not have the caller's name, press the "MEMO" button and then enter the name.
3. When completed, press the "MEMO" button again to store.

### **Reviewing numbers and names in phone book**

1. In standby mode, press the "MEMO" button, and then the LCD shows the total number of records (i.e.: 03 MEMORY).
2. There are three (3) ways to review the records:
  - a. Press the ▲ or ▼ arrow button to review the records.
  - b. Enter the caller's name, and then press the "MEMO" button to review the matching record.

Or –

- c. Enter the first character of the caller's name, then press the "MEMO" button. The LCD display shows the matching records. Press the ▲ or ▼ arrow button to get your desired record.

### **Modifying numbers and names in phone book**

1. In standby mode, press the "MEMO" button, then the LCD shows the total number of records.
2. Then press the ▲ or ▼ arrow button to go to the record to be changed.
3. Press the "SEL" button to enter the modify mode, and the last digit of the number flashes.
4. If necessary, press the "F" button to delete the error digits. Enter the new number using the keypad.
5. Press the "MEMO" button to confirm and enter the name modification.
6. If necessary, press the "F" button to delete the error characters. Enter the new name by keypad.
7. Press the "MEMO" button to confirm and a confirmation beep will sound.

### **Deleting a single record from phone book**

1. In standby mode, press the "MEMO" button, and then the LCD shows the total number of records.
2. Then press the ▲ or ▼ arrow button to go to the record to be deleted.
3. Press the "F" button twice (2), then that single record will be deleted.

### **Deleting all records from phone book**

1. In standby mode, press the **"MEMO"** button, and then the LCD shows the total number of records.
2. Press the **"F"** button twice (2), and then all of the records will be deleted.

## **CALLER ID Operation**







### **Caller Identification (CALLER ID)**

When somebody calls, the received caller information is displayed on the LCD display. If the call is answered on this phone, this caller information is now considered an "old call". Otherwise, the CALLER ID information will be stored in the call log. Any call information, which has not been reviewed, will be considered as a "new call".

The **NEW CALL LED** will blink. The top row displays the position of call in call history, the time and date of the call. The second row displays the incoming telephone number. The third row displays the caller's name (11 letters) or is blank if there is no information.

### **Reviewing the CALLER ID**



If there are new calls in memory, the **"NEW"** icon will turn on and flash. After all the new calls have been reviewed, the icon will turn OFF.

1. In standby mode, press the  or  arrow button, then the LCD display shows the total number of CALLER ID numbers and new numbers (**ALL 00 NEW 00**).
2. Then press the  or  arrow button again to view the CALLER ID content. Press the  down arrow to scroll the CALLER ID information from the most recent record. Or, press the  up arrow button to scroll the CALLER ID information from the oldest record.
3. The user can press the **"F"** button one time to go back to standby mode. Or it will go back to standby automatically at 30 seconds time out if there is no action.

### **Dialing from the CALLER ID**

During the reviewing mode, press the "Talk" (handset) button when dialing within the same area code. When dialing outside your area codes, press the "1" key to dial the number on the LCD display.

### **Deleting all CALLER ID numbers**

1. In standby mode, press the  or  arrow button, then the LCD display shows the total number of CALLER ID numbers and new numbers (**ALL 00 NEW 00**).
2. Then press the **"F"** button twice to delete all of the CALLER ID numbers.

### Deleting a single CALLER ID number

1. In standby mode, press the ▲ or ▼ arrow button, then the LCD display shows the total number of CALLER ID numbers and new numbers (**ALL 00 NEW 00**).
2. Then press the ▲ or ▼ arrow button again to view the CALLER ID number you want to delete.
3. Press the “F” button twice to delete that single CALLER ID number.

## **CALLER ID on Call Waiting Operations**

This product has a CALLER ID with Call Waiting feature with service from your local phone service provider. CALLER ID with Call Waiting lets you see who’s calling before you answer the phone, even when you’re on another call.

You can press the “F” button to answer the 2nd caller. After the call, you can press this button once to continue the first conversation.

## **Expandable Handset(s)**

Expand your BellSouth A50 System! Your base can support up to 2 additional handsets! To order additional expandable handsets (model# BS-A50E) in the United States call BellSouth at 800-586-9828 V or 888-340-1002 TTY.

## **Security**

Your BellSouth A50 uses a digital coding security system to prevent unauthorized use of your telephone line by another nearby cordless telephone. The system has its own identifying signal created by microcomputers in both the base unit and handset(s).

### Security Code

This BellSouth A50 has an internal security code with 65,536 possible combinations.

### Multi-Channel Access

Your BellSouth A50 lets you select a channel from the 40 frequencies available to transmit signals between the base unit and handset. When you notice interference from other cordless telephones, change to another channel by pressing the “CH” button on the handset.

# Technical information

This cordless telephone uses radio frequencies to allow mobility. There are certain difficulties in using radio frequencies with a cordless telephone. While these are normal, the following could affect the operation of your system:

## **Noise**

Electrical pulse noise is present in most homes at one time or another. This noise is most intense during electrical storms. Certain kinds of electrical equipment such as light dimmers, fluorescent bulbs, motors and fans also generate noise pulses. Because radio frequencies are susceptible to these noise pulses, you may occasionally hear them in your handset. Generally they are a minor annoyance and should not be interpreted as a defect in the system.

## **Range**

Because frequency is used, the location of the base unit can affect the operating range. Try several locations in your home or office and pick the one that gives you the clearest signal to the handset.

## **Interference**

Electronic circuits activate a relay to connect the cordless telephone to your telephone line. These electronic circuits operate in the radio frequency spectrum. While several protection circuits are used to prevent unwanted signals, there may be periods when these unwanted signals enter the base. You may hear clicks or hear the relay activate while you are not using the handset. If the interference occurs frequently, it can be minimized or eliminated by relocating the base.

**NOTICE:** This cordless telephone uses radio communication between the handset and the base unit and may not ensure privacy of communication. Other devices, including other cordless telephones, may interfere with the operation of this cordless telephone or cause noise during operation. Units not containing coded access may be accessed by other radio communication systems. Cordless telephones must not cause interference to any licensed radio service.

## **Optional Shaker Ring Signaling:**

Your BellSouth A50 base is equipped with a jack for an optional vibrating pad to alert you when the phone is ringing. Simply plug the shaking pad into the jack on the (See page 6 - #6). When the telephone rings, the pad will vibrate with each ring of the phone.

To order a BellSouth shaker (model# BS-SHK) call BellSouth Special Needs Equipment Center at 800-586-9828 V or 888-340-1002 TTY.

Caution: For safety and correct functionality considerations, your A50 phone can only be guaranteed when used with our BellSouth shaker, model BS-SHK.

# Maintenance and Care

The BellSouth A50 has been designed to give you years of dependable service. To ensure the utmost in performance, follow these guidelines in caring for your phone:

## **General Cautionary Instructions**

1. Avoid dropping or knocking the unit.
2. Dust the unit regularly. Unplug your phone and wipe with a soft, slightly damp cloth to remove any dirt. To avoid damage, NEVER use an abrasive or strong solvent to clean any part of the phone.
3. Keep the phone out of direct sunlight.
4. Avoid placing the phone in extremely humid conditions.
5. Avoid electric shock by keeping the phone away from water (i.e. bathroom, kitchen sink, pools, etc.)

## **Battery Cautionary Instructions**

To reduce the risk of fire or personal injury, read and follow these instructions

1. Use only the following type and size of batteries:  
3 PCS AAA NiMH Rechargeable Batteries
2. Do not dispose of the batteries in a fire. They may explode. Check with local codes for possible disposal instructions.
3. Do not open or mutilate the batteries. They release electrolytes, which are corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling the batteries to prevent shorting the battery with conductive materials such as rings, bracelets and keys. The batteries or conductor may overheat and cause burns.
5. Charge the batteries provided with, or identified for use with this product, only in accordance with the instructions and limitations specified in this manual.
6. Observe proper polarity orientation between the batteries and battery charger.

# Specifications

Maximum Gain:

40 dB in Wide band (300 to 3400Hz)

+/- 10 extra dB max Low Frequency (Bass 300 Hz)

+/- 10 extra dB High Frequency (Treble 3400Hz)

Ringer Gain:

Base: Off, 85 dB, 90 dB

Handset: 80 dB



Dimensions:

Handset Size: 6" X 2.25" X 1"

Base Size: 5.5" X 4" X 2.5"

Weight: 11.2 oz with batteries

Power Requirements:

120VAC-60Hz-18W / 12VDC-500mA


Batteries: (3) AAA NiMH Batteries (included)

## Troubleshooting Guide

If you experience trouble with your BellSouth A50, please try the suggestions below before calling for help.

For Customer service call 800-586-9828 V or 888-340-1002 TTY. Please retain your receipt as your proof of purchase

### **1. If the phone doesn't work at all, check these items first:**

- Adjust the volume controls.
- Make sure the AC adapter is plugged into an outlet not controlled by a wall switch.
- Make sure the AC adapter is securely plugged into the base and AC outlet.
- Make sure the telephone modular line cord is plugged firmly into the base and the modular jack.
- If the handset does not beep when you press the , the battery might need charging.
- Make sure the batteries are installed correctly.
- Make sure the battery was charged 24 hours prior to the first use.
- Make sure you are in the usable range of the base.
- Make sure the handset is off-hook.
- Reset the security code by placing the handset in the base for 5-10 seconds.

If the above suggestions don't solve the problem, try re-initializing the Handset a Base:

1. Disconnect the power to the base
2. Remove the handset batteries
3. Wait a few minutes
4. Connect the power to the base
5. Insert the handset batteries
6. Put the handset in the base to re-initialize

### **2. If you hear a two-beep signal when you try to use the Handset:**

- You might be out of range. Move closer to the base and try again.
- If moving closer to the base doesn't help, try following the direction above for re-initializing the handset and base.

**3. If the phone does not ring when you receive a call:**

- Make sure the handset ringer is ON.
- Make sure the telephone modular line cord is connected firmly to the base and the telephone jack.
- Make sure the AC adapter is plugged firmly into an outlet not controlled by a wall switch.
- You might be too far from the base; move closer.
- You might have too many extension phones on your telephone line to allow all of them to ring. Try unplugging some of them.

**4. If you hear noise or interference when using the phone:**

- You may be out range. Move closer to the base.
- Press and release the “CH” button to change to another of the 40 channels available.
- Household appliances plugged into the same circuit as the base can sometimes cause interference. Try moving the appliance or the base to another outlet.
- Using the handset near household appliances (microwaves, computers, televisions, stereos, family videos, games and fax machines) can sometimes cause interference. Move away from appliances while using the handset.
- Try moving the base to another location.
- If the buttons don’t work, try placing the handset in the base for at least 15 seconds.
- Make sure the handset battery is fully charged.

**5. Phone will not hold a charge:**

- Make sure the charging contacts on the handset and base are free of dust and dirt. Clean the contacts with a soft cloth.
- Make sure CHARGE LED on the base is lit when handset is in the cradle.
- If necessary, replace the handset battery (See page #11 - Handset Battery Charging).

**6. If you hear other calls while using your phone:**

- Press the “CH” button to change to another channel.
- Disconnect the base from the modular jack and plug in a corded telephone. If you still hear other calls, the problem is probably in your wiring or local services. Call your local telephone service company.

**7. If you lose a call after changing channels:**

- You were probably almost out of range. Move closer to the base before changing channels. Before placing another call, set the handset in the base for at least 15 seconds.

**8. If the LOW BATTERY indicator is on display:**

- The battery needs recharging.

# FCC Registration Notice

THE INFORMATION INFORMING THE USER OF HIS/HER AND THE TELEPHONE COMPANY'S RIGHT AND OBLIGATION IS OUTLINED BELOW.

- a) This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. ON the bottom of this equipment is a label that contains, among other information, a product identifier in the format US: AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.
- b) All applicable certification jacks Universal Service Order Codes (USOC) for the equipment is provided (i.e. RJ11C) in the package with each piece of approved terminal equipment.
- c) A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirement adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.
- d) The REN is used to determine the number of devices that may be connected to the telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.00). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. [For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.
- e) If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your rights to file a complaint with the FCC if you believe it is necessary.
- f) The telephone company may make changes in its facilities, equipment, operation or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.
- g) Should you experience trouble with the equipment, please contact: BellSouth Special Needs Equipment Center, Attn: HITEC, 8160 S Madison St - Burr Ridge, IL 60527, 800-586-9828 V/ 888-340-1002 TTY, 888-654-9219 FAX, e-mail: [customerservice@bellsouthspecialneeds.com](mailto:customerservice@bellsouthspecialneeds.com) for repair or warranty information. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
- h) Please follow instructions for repairing if any (e.g. battery replacement section);

otherwise do not alter or repair any part of device except as specified.

- i) Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation for information.
- j) **NOTICE:** If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of the BellSouth A50 does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.
- k) This equipment is hearing aid compatible.

**WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**NOTE:** *This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These Limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.*

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- **Consult the dealer or an experienced radio TV technician for help.**

This product meets the applicable Industry Canada technical specifications.

The Ringer Equivalence Number is an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirements that the sum of the Ringer Equivalence Number of all the devices does not exceed five.

**The US Service Center** is BellSouth Special Needs Equipment Center, Attn: HITEC, S. Madison St, Burr Ridge, IL 60527-5854, 800-586-9828 (T), 888-340-1002 (TTY), 888-654-9219 (Fax) or customerservice@bellsouthspecialneeds.com (E-mail). If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

# Warranty & Service

HITEC Group, Ltd. warrants the BellSouth A50 against any defect in materials or workmanship for the period of one year from the date of purchase. Should you experience a problem, contact our customer service department or visit our website at [www.bellsouthspecialneeds.com](http://www.bellsouthspecialneeds.com).

Be sure to save your sales receipt as proof of purchase date should you need warranty service.

Within a period of one year from purchase date, BellSouth will repair or replace (our discretion) your HITEC A50 at no cost, if a defect in materials or workmanship is found. If we elect to replace your phone, we may replace it with a new or reconditioned product of the same or similar design. Repair or replacement will be warranted for a period of 90 days or the original time on the original warranty, whichever is longer.

The warranty does not cover accidents, negligence or breakage to any parts. This includes shipping damage, failure to follow instructions, misuse, fire, floods, use of incompatible accessories, Acts of God or failure in your phone service carrier's line service. The product must not be tampered with or taken apart by anyone who is not an authorized BellSouth or HITEC representative. Tampering with the phone will void any written or implied warranties.

Neither HITEC nor BellSouth shall be responsible for loss of time, inconvenience, loss of use of your BellSouth A50, property damage caused by your BellSouth A50 or any other incidental or consequential damages.

Warranty service is available only with proof of purchase.

**IMPORTANT: YOUR RECEIPT IS PART OF YOUR WARRANTY AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.**

Shipping cost must be prepaid and the product must be packaged appropriately for shipping.

BellSouth Special Needs Equipment Center  
Attn: HITEC  
8160 S Madison St  
Burr Ridge, IL 60527



For product support and help visit our website at  
[www.bellsouthspecialneeds.com](http://www.bellsouthspecialneeds.com)  
e-mail: [customerservice@bellsouthspecialneeds.com](mailto:customerservice@bellsouthspecialneeds.com)  
Telephone: 800-586-9828  
TTY: 888-340-1002  
Or Fax: 888-654-9219

©2006 BellSouth Corporation. All BellSouth marks contained herein are owned by BellSouth Intellectual Property Corporation. All other marks contained herein are the property of their respective owners.

This product is manufactured by HITEC Group, Ltd. under license from BellSouth Intellectual Property Marketing Group.